


SCALE 0.100

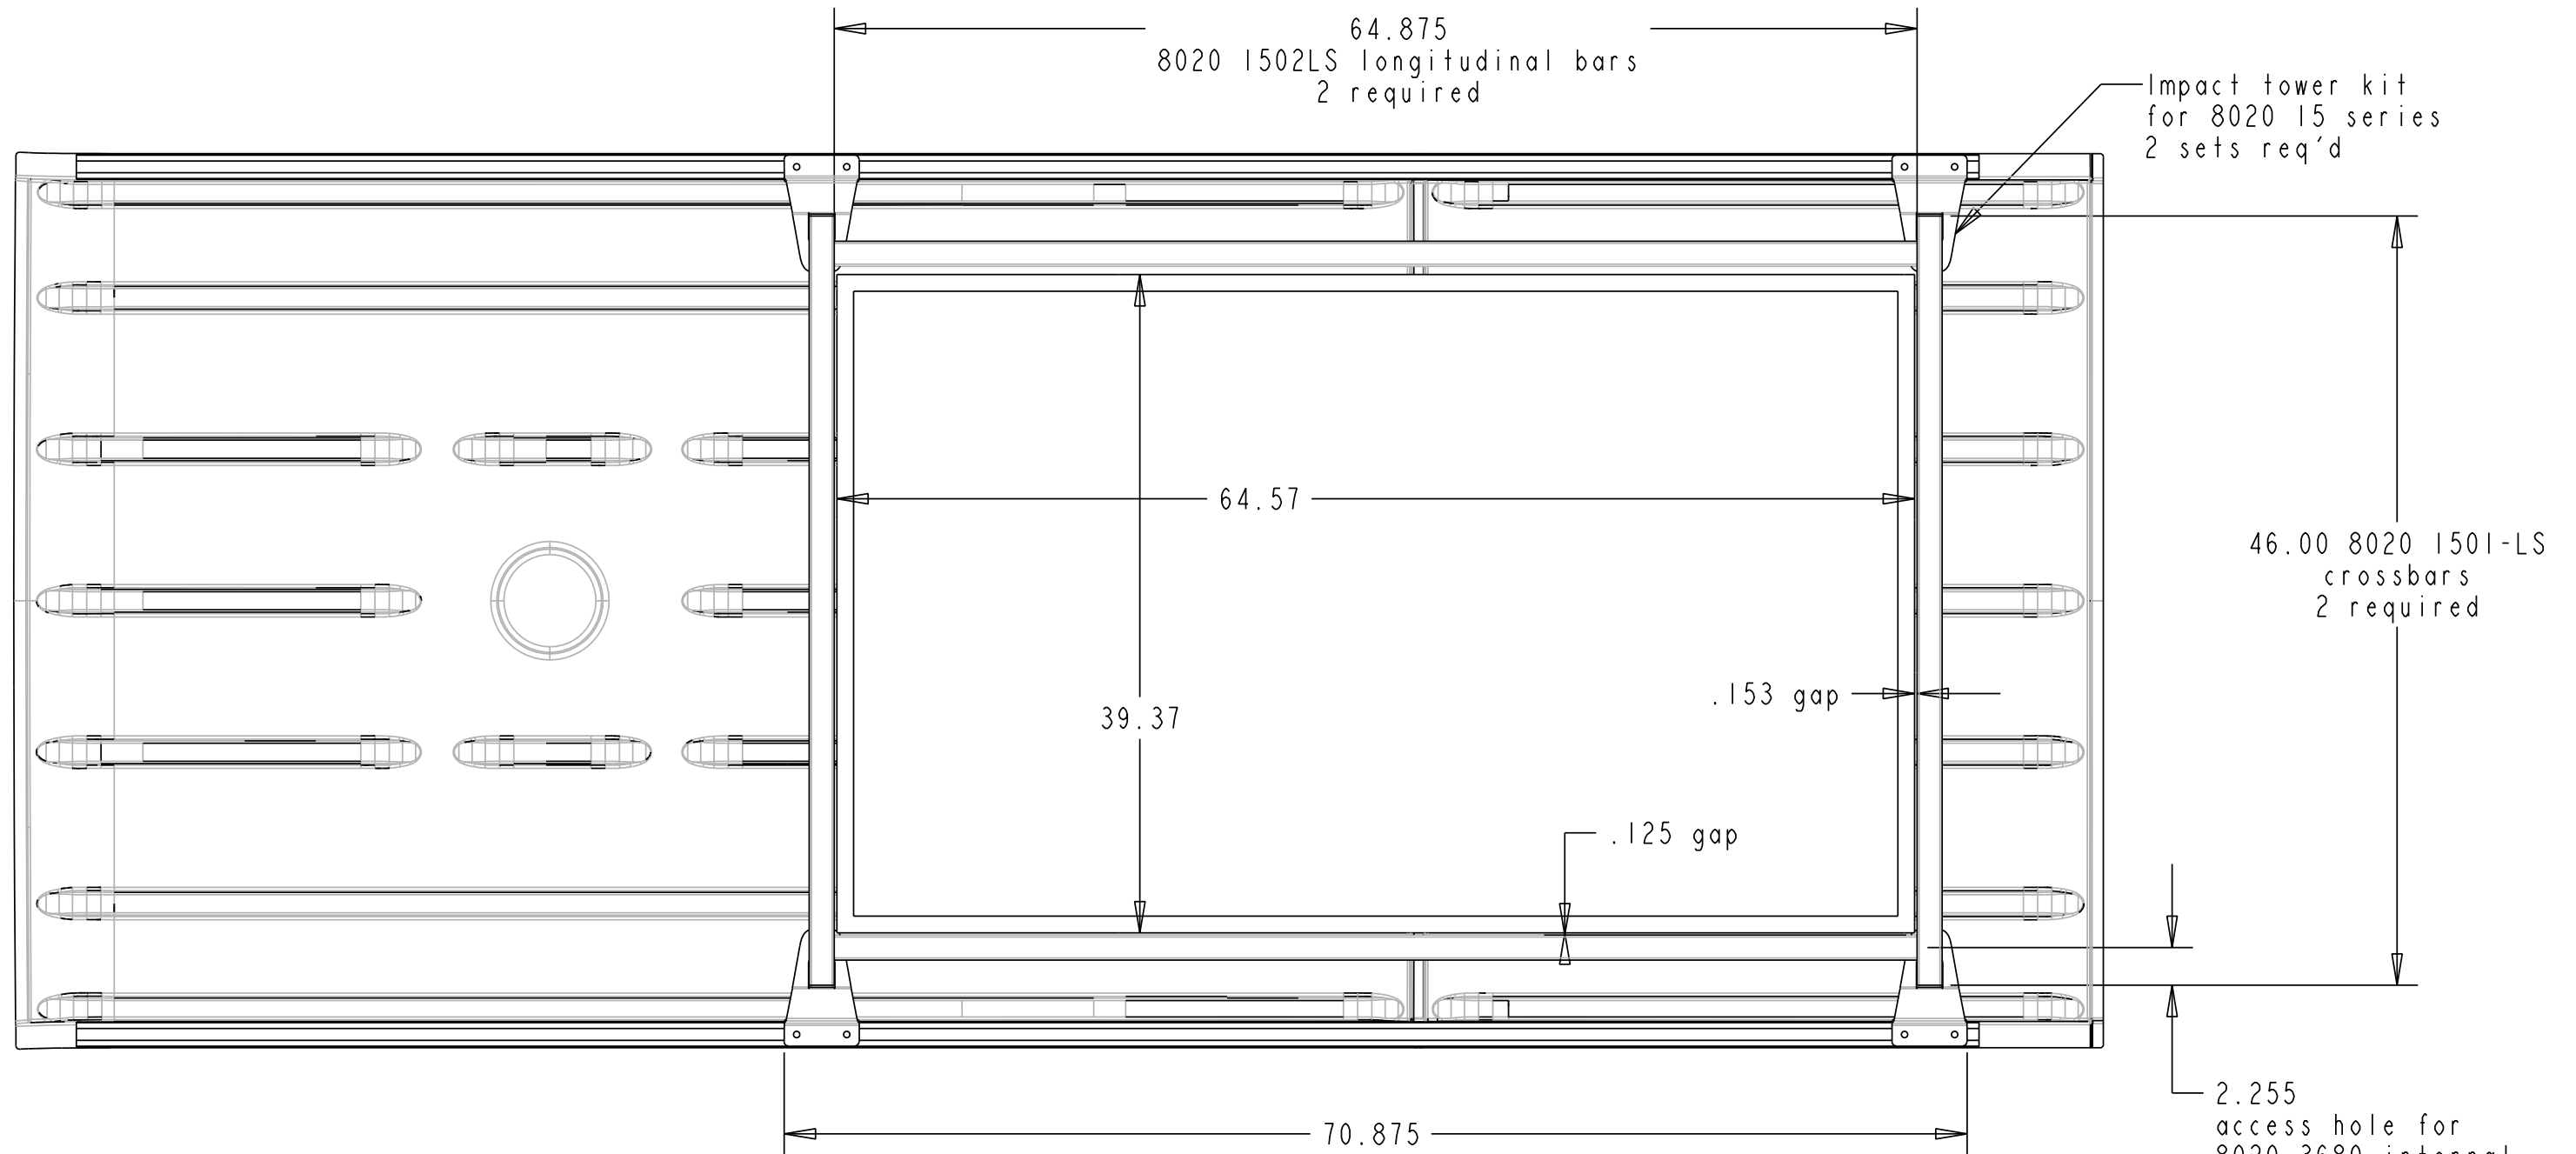

← Front of Sprinter van

NOT SHOWN

8 Impact 2-hole tab kits
 1 ea at 1/4 and 3/4 position along xbars
 1 ea at 1/4 and 3/4 position along long'l bars
 (refer to solar panel installation guidelines)